


you + hp

快速入門

Quick Start

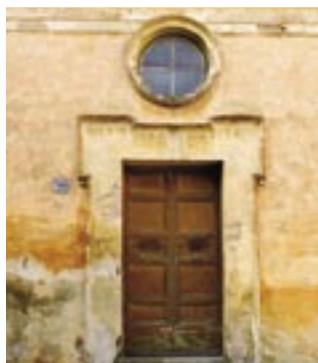


HP Photosmart 8700 series



1 拆開 HP Photosmart 印表機的包裝

Unpack the HP Photosmart printer

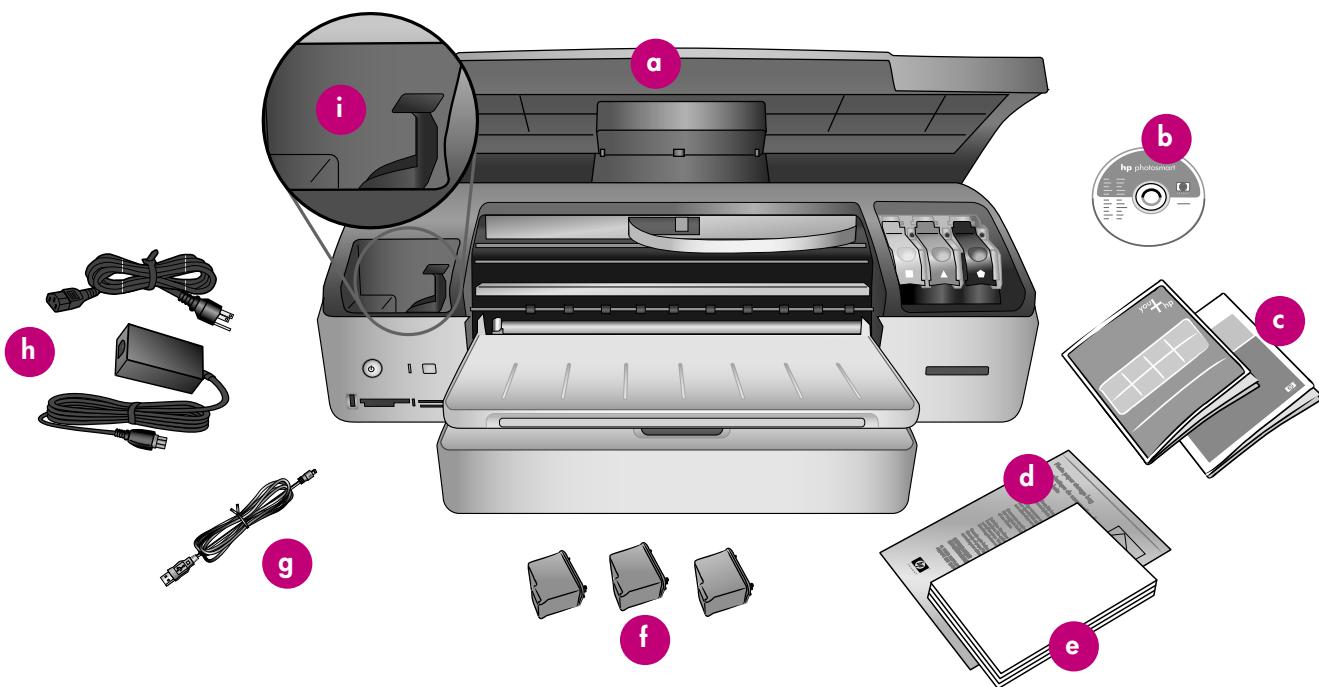

繁體中文

感謝您購買 HP Photosmart 印表機！請仔細閱讀此手冊與其他隨附的文件來幫助您開始使用以及獲得印表機的最佳效能。

1. 從內部和印表機周圍取出膠帶和硬紙板包裝材料。

2. 檢查包裝箱內的物件：

a. HP Photosmart 8700 series 印表機

b. 光碟上的 HP Photosmart 軟體

c. 使用者文件

d. 相紙儲存袋

e. 紙張樣品

f. 列印墨匣

g. USB 纜線

h. 電源供應器和電源適配器

i. 列印墨匣護套

English

Thank you for purchasing an HP Photosmart printer! Read this booklet and other accompanying documentation to help you get started and get the most out of your printer.

1. Remove the tape and cardboard packaging from inside and around the printer.

2. Check the contents of the box:

a. HP Photosmart 8700 series printer

b. HP Photosmart software on CD

c. User documentation

d. Photo paper storage bag

e. Paper sampler

f. Print cartridges


g. USB cable

h. Power supply and power adapter

i. Print cartridge protector

2 連接電源與設置您的語言

Connect the power and set your language

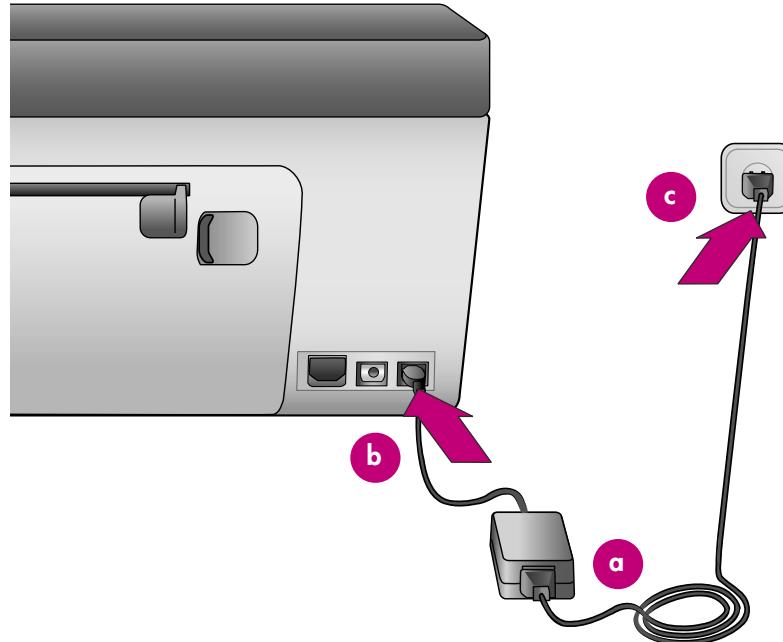

繁體中文


1. 將電源線插入印表機和牆上插座。
- 重要！除非在安裝軟體過程中系統有提示，否則請不要連接 USB 繩線。**
2. 開啓印表機電源。
3. 當「Select Language」（選取語言）在印表機螢幕上顯示時，請按◀或▶反白顯示您的語言。
4. 按下以選取您的語言。
5. 按◀或▶反白顯示「Yes」（是），然後按下。確認畫面將會顯示。
6. 當「Select Country/Region」（選取國家/地區）在印表機螢幕上顯示時，請反白顯示您的國家/地區，然後按下。確認畫面將會顯示。

English

1. Connect the power cord to the printer and to a wall outlet.
- Important! Do not connect the USB cable until you are prompted during software installation.**
2. Turn on the printer.
3. When **Select Language** appears on the printer screen, press ▲ or ▼ to highlight your language.
4. Press to select your language.
5. Press ▲ or ▼ to highlight **Yes** to confirm, then press . A confirmation screen appears.
6. When **Select Country/Region** appears on the printer screen, highlight your country/region, then press . A confirmation screen appears.

3 裝入一般紙張

Load plain paper

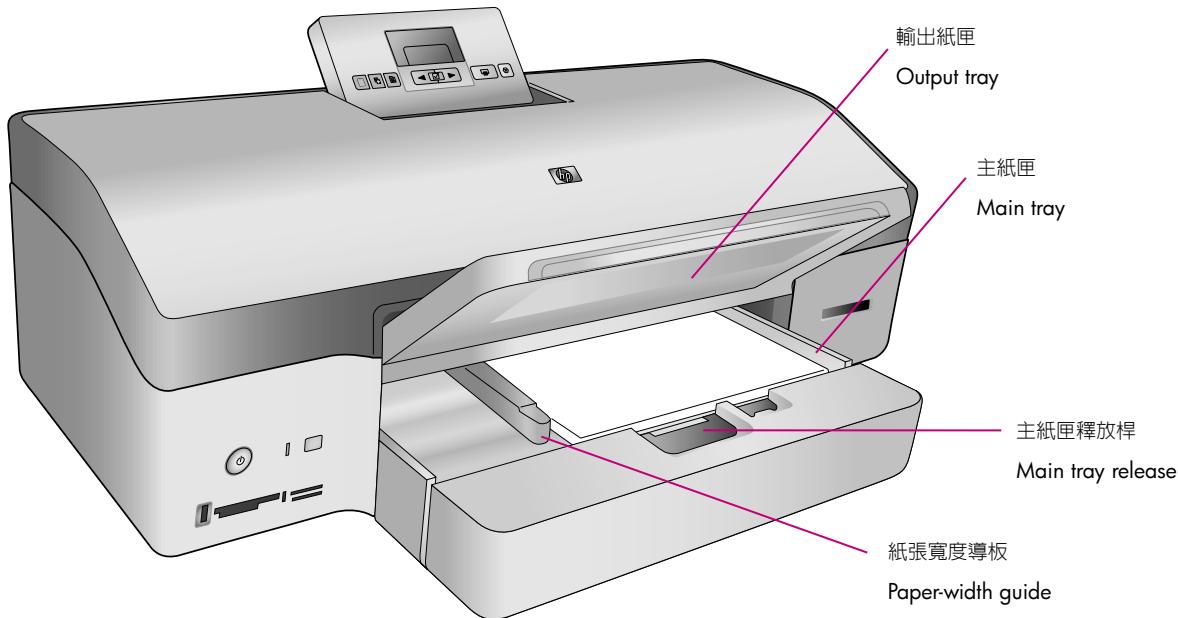

繁體中文

將一般紙張裝入主紙匣以準備校正列印墨匣。

1. 提起輸出紙匣，滑入紙張寬度導板和主紙匣釋放桿直到它們的最遠位置。
2. 將一疊一般紙張（約 50 張）放入主紙匣。
3. 向內滑入紙張寬度導板和主紙匣釋放桿直到它們停止在紙張的邊緣。
4. 放下輸出紙匣。

如需有關裝入相紙和列印相片的資訊，請參閱《使用指南》。

English



Load plain paper in the Main tray in preparation for print cartridge alignment.

1. Raise the Output tray and slide the paper-width guide and Main tray release to their outermost positions.
2. Place a stack of plain letter paper (approximately 50 sheets) in the Main tray.
3. Slide the paper-width guide and Main tray release inward until they stop at the edges of the paper.
4. Lower the Output tray.

For information about loading photo paper and printing photos, see the User's Guide.

4 安裝列印墨匣

Install the print cartridges

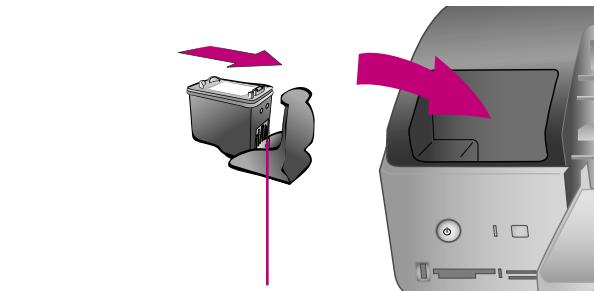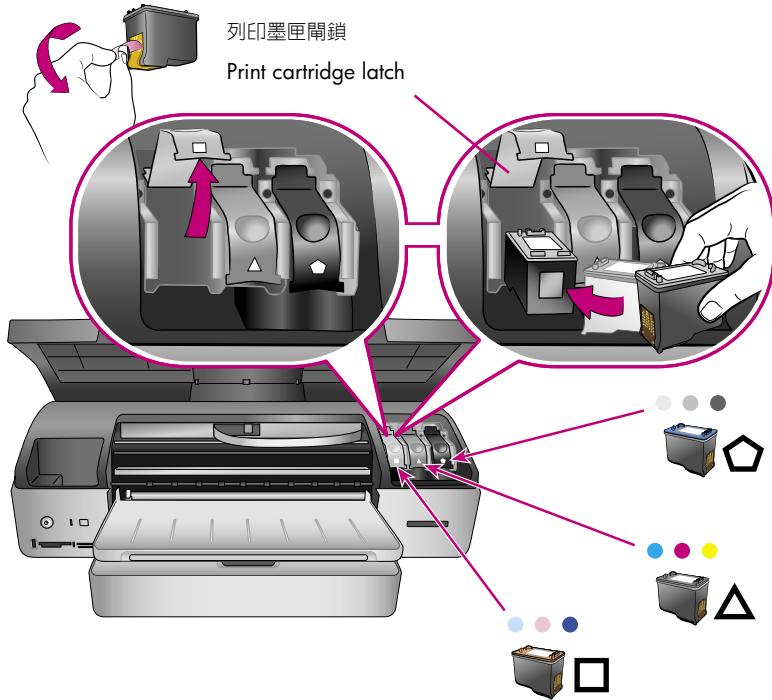

列印墨匣與護套*

Print cartridge and protector*

安裝列印墨匣時，請使用墨匣和墨匣閂鎖上的符號來比配墨匣類型。

When installing print cartridges, use the symbols on the cartridge and cartridge latch to match up cartridge types.

繁體中文

1. 提起印表機的頂蓋，然後向下按並拉出列印墨匣閂鎖。
2. 拆開藍色相片列印墨匣的包裝，然後拉出粉紅色標籤以取下透明膠帶。請勿觸摸墨水噴嘴或銅色觸點。
3. 握住墨匣，使銅色觸點先進入印表機。將墨匣滑入金屬桿下方的托架左側。將墨匣向內推，直到卡入到位。
4. 向下推壓墨匣，直到它鎖定到位。
5. 重複這些步驟安裝三色和灰色相片列印墨匣。
6. 放下頂蓋。印表機螢幕提示您列印校正頁時，請按下 。
7. 安裝軟體以繼續設定印表機。選擇第 6–11 頁中的其中一個選項，在 Macintosh 或 Windows 電腦上設定乙太網或 USB 連線。

* 在不使用選用的列印墨匣時將它儲存在護套中。如需有關您的印表機可以使用的選用列印墨匣之資訊，請參閱《使用指南》。


English

1. Raise the printer's top cover, and push down and pull out the print cartridge latch.
 2. Unwrap the Blue Photo print cartridge, and pull the pink tab to remove the clear tape. **Do not touch the ink nozzles or copper-colored contacts.**
 3. Hold the cartridge so the copper-colored contacts go into the printer first. Slide the cartridge into the left side of the cradle under the metal bar. Push the cartridge until it snaps into place.
 4. Push down on the cartridge latch until it locks.
 5. Repeat this process to install the Tri-color and Gray Photo print cartridges.
 6. Lower the top cover. Press on the control panel when the printer screen prompts you to print an alignment page.
 7. Install the software to continue setting up the printer. Choose one of the options on pages 6–11 to set up an Ethernet or USB connection on a Macintosh or Windows computer.
- * Store an optional print cartridge in the protector when not in use. See the User's Guide for information about optional print cartridges that are available for your printer.


5 Macintosh

乙太網軟體安裝 (Macintosh)

Ethernet software installation (Macintosh)

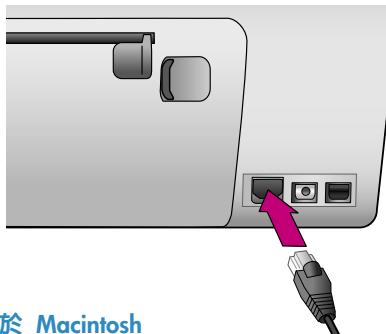

僅限於 Macintosh

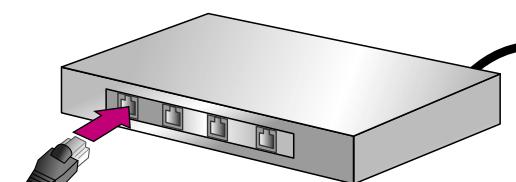

繁體中文

Macintosh® OS X v10.1.5–v10.3

關於 Macintosh USB 的安裝詳情，請參閱第 10 頁。

註：隨時準備好《使用指南》的「網路」附錄以便在安裝過程中參考。

若要將印表機連線到網路，您需要以下裝備：

- 一條帶 RJ-45 插頭的 CAT-5 乙太網纜線。（它與 USB 繩線或一般的電話線不同，使用後者的任何一種將會損壞印表機或其他網路裝置。）
- 網路存取點，例如具有開放連接埠的集線器、路由器或交換器。

連接網路纜線

1. 將乙太網纜線的一端連接到印表機的背面。
2. 將乙太網纜線的另一端連接到集線器、路由器或交換器上的閒置埠。

請勿使用乙太網纜線將印表機直接連接到電腦。不支援對等式網路連線。

列印網路組態頁

按照《使用指南》之「網路」附錄中的指示列印網路組態頁。在軟體安裝過程中您可能需要用到該頁所顯示的資訊。

安裝印表機軟體



您必須在每一台要列印至 HP Photosmart 印表機的電腦上安裝軟體。

1. 將 HP Photosmart 光碟放入電腦，然後連接桌面上的 **HP Photosmart 光碟** 圖像。
2. 連按「**HP Photosmart Installer**」（**HP Photosmart 安裝程式**）圖像，然後按照畫面上的指示執行。
3. 輸入鑑定名稱和密碼，然後點按「確定」。
4. 按照畫面上的指示執行。顯示「**HP Photosmart Installer**」（**HP Photosmart 安裝程式**）視窗時，點按「**Install**」（安裝）。

5. 在「Select Device」（選取設備）視窗中，點按「**TCP/IP (Network)**」（TCP/IP 網路）。安裝程式將會搜尋網路上的印表機。

如果找不到印表機：

- 確定已將網路纜線連接到印表機。
 - 查找在網路配置頁上列出的 IP 位址。
 - 點按「**Find**」（尋找），輸入 IP 位址，然後點按「**Save**」（儲存）。
6. 選取 HP Photosmart 8700 series 印表機，然後點按「**Utilities**」（公用程式）。註冊印表機。
 7. 在「**Print**」（列印）對話方塊中選擇印表機。如果印表機沒有顯示，請選取「**Edit Printer List**」（編輯印表機清單）以新增印表機。
 8. 在「**Printer List**」（印表機清單）視窗中，點按「**Add**」（新增），然後從下拉式清單選取「**Rendezvous**」。
 9. 從清單選取印表機，然後點按「**Add**」（新增）。

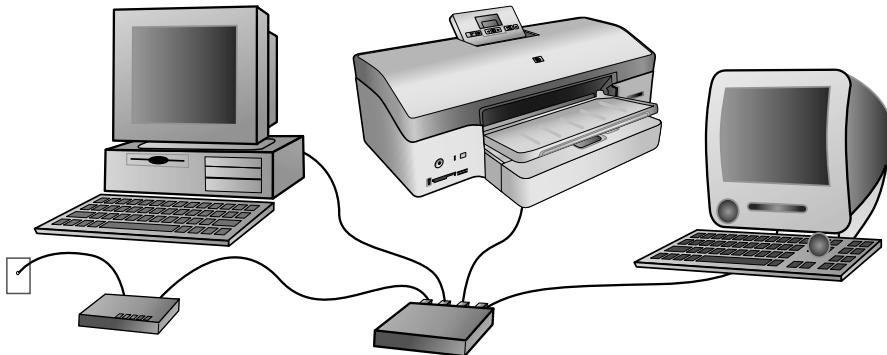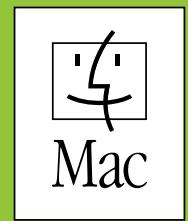

Macintosh only

English

Macintosh® OS X v10.1.5–v10.3

For Macintosh USB installation, see page 10.

Note: Keep the Networking appendix of the User's Guide nearby to use as a reference during installation.

You need the following to connect the printer to the network:

- A CAT-5 Ethernet cable with an RJ-45 plug. (This is not the same as a USB cable or a regular phone wire, the use of which can damage the printer or other network devices.)
- A network access point such as a hub, router, or switch with an open port.

Connect the network cable

1. Connect one end of the Ethernet cable to the back of the printer.
2. Connect the other end of the Ethernet cable to an empty port on the hub, router, or switch.

Do not connect the printer directly to a computer using an Ethernet cable. Peer-to-peer networking is not supported.

Print a network configuration page

Follow the instructions in the Networking appendix of the User's Guide to print a network configuration page. You may need the information on that page during software installation.

Install the printer software

You must install the software on every computer that will print to the HP Photosmart printer.

1. Insert the HP Photosmart CD into the computer, then double-click the **HP Photosmart CD** icon on the desktop.
2. Double-click the **HP Photosmart Installer** icon, and follow the onscreen instructions.
3. Enter the Authentication Name and Password, and click **OK**.
4. Follow the onscreen instructions. When the HP Photosmart Installer window appears, click **Install**.

5. In the Select Device window, choose **TCP/IP (Network)**. The installer searches for printers on the network.




If the printer is not found:

- Make sure the network cable is connected to the printer.
 - Locate the IP address listed on the network configuration page.
 - Click **Find**, enter the IP address, and click **Save**.
6. Choose the HP Photosmart 8700 series printer, then click **Utilities**. Register the printer.
 7. Select the printer in the Print dialog box. If the printer does not appear, select **Edit Printer List** to add the printer.
 8. In the Printer List window, click **Add**, and select **Rendezvous** from the drop-down list.
 9. Select the printer from the list, then click **Add**.

5 Windows

乙太網軟體安裝 (Windows)

Ethernet software installation (Windows)

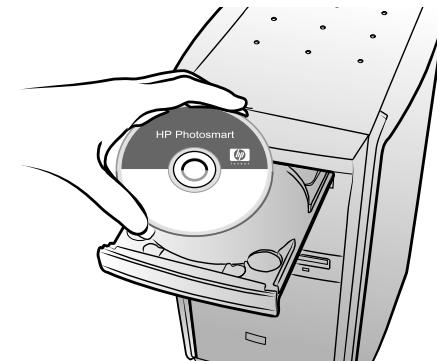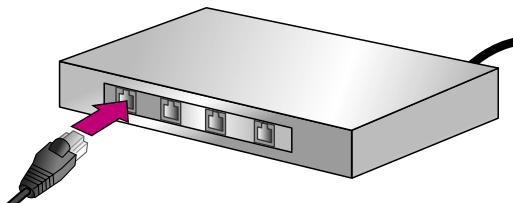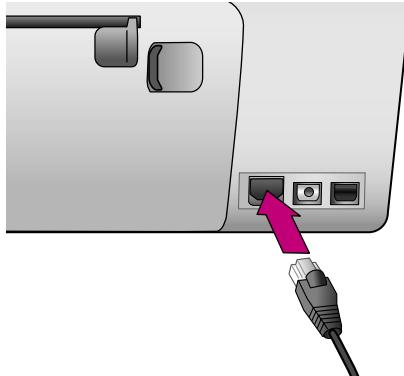

僅限於 Windows

繁體中文

Windows® 98、Me、2000 Professional、XP Home、XP Professional

關於 Windows USB 的安裝詳情，請參閱第 11 頁。

註：隨時準備好《使用指南》的「網路」附錄以便在安裝過程中參考。

若要將印表機連線到網路，您需要以下裝備：

- 一條帶 RJ-45 插頭的 CAT-5 乙太網纜線。（它與 USB 纜線或一般的電話線不同，使用後者的任何一種將會損壞印表機或其他網路裝置。）
- 網路存取點，例如具有開放連接埠的集線器、路由器或交換器。

連接網路纜線

1. 將乙太網纜線的一端連接到印表機的背面。
2. 將乙太網纜線的另一端連接到集線器、路由器或交換器上的閒置埠。

請勿使用乙太網纜線將印表機直接連接到電腦。不支援對等式網路連線。

列印網路組態頁

按照《使用指南》之「網路」附錄中的指示列印網路組態頁。在軟體安裝過程中您可能需要用到該頁所顯示的資訊。

安裝印表機軟體

您必須在每一台要列印至 HP Photosmart 印表機的電腦上安裝軟體。

1. 將 HP Photosmart 軟體光碟放入電腦然後按照畫面上的指示進行。
2. 在「Connection Type」（連線類型）畫面上，選取「Through the network」（透過網路），然後按一下「Next」（下一步）。「搜尋」畫面將會顯示。


3. 選取印表機以進行安裝：

如果出現「Printer Found」（找到印表機）畫面，選取「Yes」（是），安裝此印表機，然後按一下「Next」（下一步）。

如果出現「Printer Not Found」（找不到印表機）畫面，按一下「Next」（下一步）然後按照畫面上的指示查找印表機。

如果出現「Check Cable Connection」（檢查纜線連接）畫面，請參閱《使用指南》之「網路」附錄以獲得詳盡的網路安裝指示以及指定靜態 IP 位址的指示。

4. 出現提示時，按一下「Finish」（完成）結束安裝。

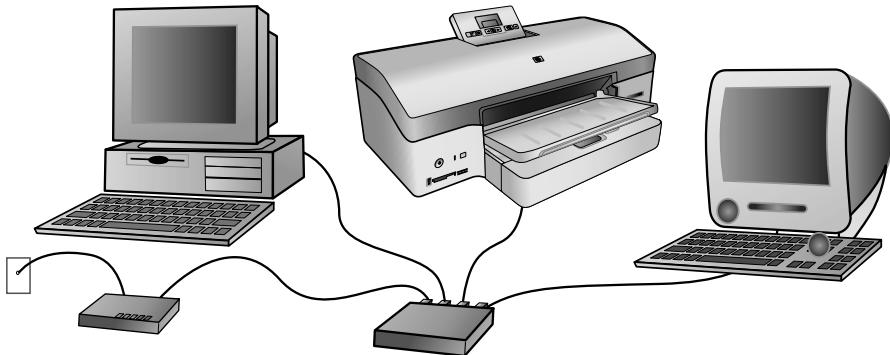

Windows only

English

Windows® 98, Me, 2000 Professional, XP Home, XP Professional

For Windows USB installation, see page 11.

Note: Keep the Networking appendix of the User's Guide nearby to use as a reference during installation.

You need the following to connect the printer to the network:

- A CAT-5 Ethernet cable equipped with an RJ-45 plug. (This is not the same as a USB cable or a regular phone wire, the use of which can damage the printer or other network devices.)
- A network access point such as a hub, router, or switch with an open port.

Connect the network cable

1. Connect one end of the Ethernet cable to the back of the printer.
2. Connect the other end of the Ethernet cable to an empty port on the hub, router, or switch.

Do not connect the printer directly to a computer using an Ethernet cable. Peer-to-peer networking is not supported.

Print a network configuration page

Follow the instructions in the Networking appendix of the User's Guide to print a network configuration page. You may need the information on that page during software installation.

Install the printer software

You must install the software on every computer that will print to the HP Photosmart printer.

1. Insert the HP Photosmart software CD into the computer and follow the onscreen instructions.
2. On the Connection Type screen, select **Through the network**, then click **Next**. The Searching screen appears.

3. Select a printer to install:

If the **Printer Found** screen appears, select **Yes, install this printer** and click **Next**.



If the **Printer Not Found** screen appears, click **Next** and follow the onscreen instructions to locate the printer.

If the **Check Cable Connection** screen appears, refer to the Networking appendix of the User's Guide for detailed network installation instructions and for instructions on assigning a static IP address.

4. When prompted, click **Finish** to exit the installation.

5 Macintosh

USB 軟體安裝 (Macintosh) USB software installation (Macintosh)

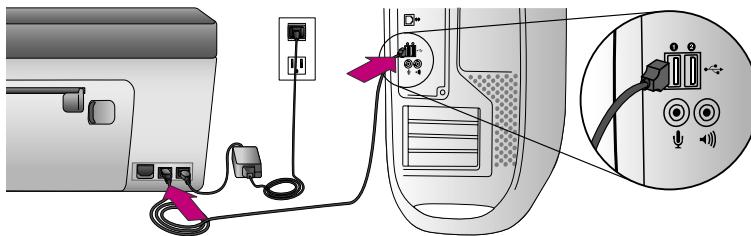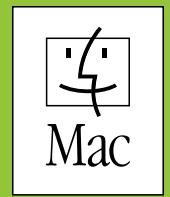

USB 連線

USB connection

僅限於 Macintosh

繁體中文

Macintosh® OS X v10.1.5–v10.3

關於 Macintosh 乙太網的安裝詳情，請參閱第 6–7 頁。

重要！請勿在出現以下步驟 4 中的提示之前連接 USB 纜線。

1. 將 HP Photosmart 光碟放入電腦。
2. 連按桌面上的 **HP Photosmart 光碟** 圖像。
3. 連按「**HP Photosmart Installer**」（**HP Photosmart 安裝程式**）圖像。按照畫面上的指示執行。
4. 出現「**HP Setup Assistant**」（**HP 安裝助手**）的「Select Device」（選取裝置）畫面時，將 USB 纜線連接到電腦和印表機。
5. 點按「**Rescan USB**」（重新掃瞄 USB）。
6. 當您的裝置名稱出現在裝置清單中時，點按「**Next**」（下一步）。
7. 點按「**Finish**」（完成）。
8. 出現「恭禧」畫面時，點按「**Done**」（完成）。「**HP 註冊頁**」會在您的瀏覽器中開啟。

註：如果您在安裝過程中遇到問題，請參閱第 12 頁的「**疑難排解**」。

Macintosh only

English


Macintosh® OS X v10.1.5–v10.3

For Macintosh Ethernet installation, see pages 6–7.

Important! Do not connect the USB cable until you are prompted in step 4 below.

1. Insert the HP Photosmart CD into the computer.
2. Double-click the **HP Photosmart CD** icon on the desktop.
3. Double-click the **HP Photosmart Installer** icon. Follow the onscreen instructions.
4. When the HP Setup Assistant Select Device screen appears, connect the USB cable to the computer and to the printer.
5. Click **Rescan USB**.
6. When your device name appears in the device list, click **Next**.
7. Click **Finish**.
8. When the Congratulations screen appears, click **Done**. The HP Registration page opens in your browser.

Note: If you experience problems during installation, see Troubleshooting on page 13.

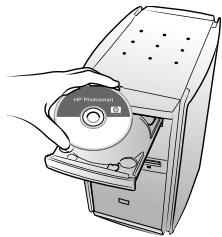

僅限於 Windows

繁體中文


Windows® 98、Me、2000 Professional、XP Home、XP Professional

關於 Windows 乙太網的安裝詳情，請參閱第 8-9 頁。

重要！請勿在出現提示之前連接 USB 繩線。

1. 將 HP Photosmart 光碟放入電腦然後依照畫面上的指示進行。若未顯示指示，請找出並連按兩下 CD 上的 **setup.exe** 檔案。
2. 選擇安裝類型。「**最低**」安裝包含您的印表機需要的裝置驅動程式和軟體。「**典型**」安裝包含的 HP Image Zone 軟體可讓您檢視、編輯、管理與分享影像。
3. 出現提示時，連接 USB 繩線。可能需要幾分鐘的時間複製檔案並且在舊的系統上也許會更久。
4. 出現「恭禧」頁面時，按一下「**Print a demo page**」（列印展示頁）。

註：安裝過程中若有任何問題，請參閱第 12 頁的「**疑難排解**」。

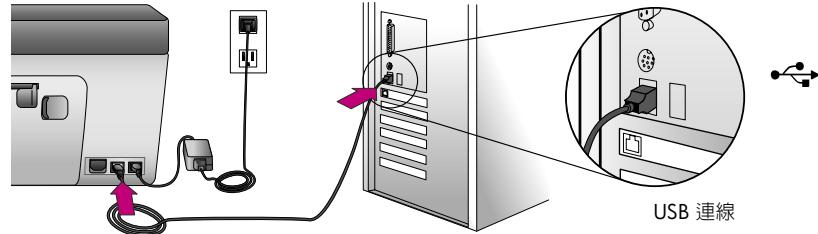

USB 連線
USB connection

Windows only

English

Windows® 98, Me, 2000 Professional, XP Home, XP Professional

For Windows Ethernet installation, see pages 8–9.

Important! Do not connect the USB cable until you are prompted.

1. Insert the HP Photosmart CD into the computer and follow the onscreen instructions. If instructions do not appear, locate and double-click the **setup.exe** file on the CD.
2. Choose the installation type. The **Minimum** installation includes device drivers and the software required by your printer. The **Typical** installation includes the HP Image Zone software for viewing, editing, managing, and sharing images.
3. When prompted, connect the USB cable. It may take several minutes to copy files and possibly longer on older systems.
4. When the Congratulations page appears, click **Print a demo page**.

Note: If you experience problems during installation, see Troubleshooting on page 13.

安裝疑難排解

Installation troubleshooting

繁體中文

若印表機軟體未成功地安裝，或軟體安裝後，印表機與電腦未正確連接，請閱讀此頁以取得可能的解決方案。

請檢查印表機與電腦間所有纜線的連接情況，並確保您所安裝的印表機軟體是最新的版本。您可以瀏覽 HP 的支援網站：www.hp.com/support 以獲得最新的軟體更新。若您仍需協助，請閱讀印表機文件或是聯絡 HP 客戶貼心服務。

僅限於 Macintosh

問題：「Print Center」（列印中心）內的所有印表機在安裝印表機軟體後消失。

解決方案：解除安裝然後重新安裝印表機軟體。將印表機新增到「Print Center」（列印中心）之前先重新啟動電腦。

僅限於 Windows

問題：插入 CD 時，並沒有自動啓動安裝軟體。

解決方案：從 Windows 「開始」功能表，選取「執行」。按一下「瀏覽」，並導覽至您已放入 HP Photosmart 軟體 CD 的 CD 光碟機。連按兩下 **setup.exe** 檔。

問題：「Found New Hardware Wizard」（發現新硬體精靈）有開啟但未能識別印表機。

解決方案：您可能在完成軟體安裝之前連接 USB 纜線。拔掉 USB 纜線。將軟體光碟放入您的 CD 光碟機，然後按照畫面上的指示執行。若未顯示指示，請查找並連按兩下 CD 上的 **setup.exe** 檔以重新啓動安裝。如果出現一則訊息說明軟體已成功安裝，請選擇「**Uninstall**」（解除安裝），然後按照說明重新安裝軟體。只有在軟體安裝期間出現提示後重新連接 USB 纜線。

問題：系統需求檢查指出，電腦目前所執行的是舊版的 Internet Explorer。

解決方案：按住鍵盤上的 **Ctrl + Shift** 並在「系統需求」對話方塊中按一下「取消」，略過限制並完成軟體安裝。您必須在安裝完成 HP Photosmart 軟體後立即升級 Internet Explorer，否則 HP 軟體將無法正常執行。**註：**Internet Explorer 完成升級後，您無須重新安裝 HP 軟體。

問題：在軟體安裝期間電腦停止回應。

解決方案：可能是因為背景正在執行防毒軟體或其他軟體程式，減慢安裝作業速度。軟體完成複製檔案期間，請等待；這可能需要數分鐘的時間。若數分鐘後電腦仍無回應，請重新啟動電腦、暫停或停用任何使用中的防毒軟體、關閉所有其他的軟體程式，然後重新安裝印表機軟體。**註：**您的防毒軟體會在重新啟動電腦後自動重新開啓。

Windows 與 Macintosh

問題：軟體安裝期間出現「System Requirements」（系統需求）對話方塊。

解決方案：電腦系統的其中一個元件不符合最低系統需求。將該元件升級至符合最低系統需求，然後重新安裝印表機軟體。

問題：電腦無法讀取 HP Photosmart CD。

解決方案：請確定 CD 沒有弄髒或有刮痕。若其他 CD 可以運作，只有 HP Photosmart CD 無效，則表示該 CD 可能已經損壞。您可以向 HP 客戶貼心服務要求一張新的 CD。如果其他 CD 也不能正常運作，則表示您需要維修 CD 光碟機。

English

If the printer software did not install successfully, or if the printer and computer are not communicating properly after software installation, check this page for possible solutions.

Check all cable connections between the printer and computer, and be sure you are using the most recent version of the printer software. You can acquire the latest software updates by visiting HP's support Web site at www.hp.com/support. If you still need help, check the printer documentation or contact HP Customer Care.

Macintosh only

Problem: All of the printers in Print Center disappear after printer software installation.

Solution: Uninstall then reinstall the printer software. Restart the computer before adding the printer in Print Center.

Windows only

Problem: The installation software does not start automatically when the CD is inserted.

Solution: From the Windows Start menu, select **Run**. Click **Browse**, and navigate to the CD drive where you inserted the HP Photosmart software CD. Double-click the **setup.exe** file.

Problem: The Found New Hardware Wizard opens but does not recognize the printer.

Solution: You may have connected the USB cable before completing the software installation. Disconnect the USB cable. Insert the software CD into your CD drive, and follow the onscreen instructions. If instructions do not appear, locate and double-click the **setup.exe** file on the CD to restart the installation. If a message appears saying the software has already been successfully installed, then select **Uninstall**, and follow the instructions to reinstall the software. Reconnect the USB cable only when prompted during software installation.

Problem: The system requirements check indicates that the computer is running an outdated version of Internet Explorer.

Solution: Press **Ctrl + Shift** on the keyboard and click **Cancel** in the System Requirements dialog box to bypass the block and complete the software installation. You must update Internet Explorer immediately after installing the HP Photosmart software, or the HP software will not work properly. **Note:** You do not have to reinstall the HP software after updating Internet Explorer.

Problem: The computer stops responding during software installation.

Solution: Virus protection software or another software program may be running in the background and slowing down the installation process. Wait while the software finishes copying files; this may take several minutes. If the computer is still not responding after several minutes, restart the computer, pause or disable any active virus protection software, quit all other software programs, and then reinstall the printer software. **Note:** Your virus protection software will turn back on automatically when you restart the computer.

Windows and Macintosh

Problem: The System Requirements dialog box appears during installation.

Solution: A component of the computer system does not meet minimum system requirements. Upgrade the component to the minimum system requirement and then reinstall the printer software.

Problem: The computer could not read the HP Photosmart CD.

Solution: Make sure the CD is not dirty or scratched. If other CDs work but the HP Photosmart CD does not, you may have a damaged CD. You can request a new CD from HP Customer Care. If other CDs do not work, you may need to service the CD drive.



數位攝影

Digital photography

繁體中文

常見問題集

您的 HP 軟體所提供之進階色彩管理選項可以改進相片品質。或者，您可以關閉這些選項讓您的相片編輯軟體管理色彩。

如需更多有關色彩管理的資訊，請參閱《使用指南》。

如何開啓印表機軟體中的色彩管理設定？

開啓您要列印的檔案。

Windows：選取「檔案」>「列印」，在「列印」對話方塊中按一下「內容」，然後按一下「色彩」標籤。從「色彩」管理功能表選取一個設定。

Macintosh：選取「檔案」>「列印」，在「列印驅動程式」視窗中選取「紙張類型/品質」。點按「紙張」標籤，然後從「色彩」管理功能表選取一個設定。

如何關閉印表機軟體中的色彩管理設定？

要獲得最高等級的色彩控制，請關閉印表機軟體中的色彩管理設定，然後讓您的應用程式處理色彩管理。

Windows：選取「檔案」>「列印」，在「列印」對話方塊中按一下「內容」，然後按一下「色彩」標籤。從「色彩」管理功能表選取「**Managed by Application**」（由應用程式管理）。

Macintosh：選取「檔案」>「列印」，在「列印驅動程式」視窗中選取「紙張類型/品質」。點按「紙張」標籤，然後從「色彩」管理功能表選取「**Application Managed Colors**」（應用程式管理的色彩）。

如何列印具有專業品質的黑白相片？

在「灰階」模式中列印可獲得具有專業品質的黑白相片。要獲得最佳效果，請確定您使用 HP 灰色相片列印墨匣以及正確的紙張類型。

English

Frequently Asked Questions

Your HP software offers advanced color management options to improve photo quality. Or, you can turn these options off to let your photo-editing software manage colors.

For more information about color management, see the User's Guide.

How do I turn on the color management settings in the printer software?

Open the file you want to print.

Windows: Select **File>Print**, click **Properties** in the Print dialog box, then click the **Color** tab. Choose a setting from the **Color management** menu.

Macintosh: Select **File>Print**, then select **Paper Type/Quality** in the print driver window. Click the **Paper** tab, then choose a setting from the **Color** menu.

How do I turn off the color management settings in the printer software?

For the greatest level of color control, turn off color management settings in the printer software and let your application handle color management.

Windows: Select **File>Print**, click **Properties** in the Print dialog box, then click the **Color** tab. Choose **Managed by Application** from the **Color management** menu.

Macintosh: Select **File>Print**, then select **Paper Type/Quality** in the print driver window. Click the **Paper** tab, then choose **Application Managed Colors** from the **Color** menu.

How do I print professional-quality black-and-white photos?

Print in Grayscale mode for professional-quality black-and-white photos. Be sure to use the HP Gray Photo print cartridge and the correct paper type for optimal results.



剪貼簿與工藝品

Scrapbooking and crafts

繁體中文

常見問題集

您的 HP 印表機和軟體提供無框相片列印、大版面範本，以及其他版面選項來滿足您的創意需要。

有關詳情，請參閱《使用指南》。

如何從印表機控制台列印無框相片？

將含有相片的記憶卡插入，然後選擇要列印的相片。在印表機控制台上，按下「Layout」（版面）按鈕以選取「One photo per sheet, borderless」（每頁一張相片，無框）圖示，然後按下「Print」（列印）。

請參閱《使用指南》以了解如何從您的 Windows 或 Macintosh 電腦列印無框相片。

如何選擇大版面範本？

大版面範本包含一個全白的背景以及許多固定的相片框，您可以將相片拖曳到這些框中。相片框會自動裁剪相片。您可以調整相片的大小然後在相片框中移動它們。

Windows：在 HP Image Zone 中的「Projects」（專案）標籤上，按一下「Album Pages」（相簿頁）。在「Work」（工作區），按一下一個頁面尺寸和主題，然後按一下大版面範本。從「My Images」（我的影像）標籤選擇相片，然後將每張相片從選擇匣拖曳到範本中所需的相片框。

Macintosh：從「Dock」中的「HP Photosmart」功能表選擇「HP Image Print」（HP 影像列印）。在「Print Style」（列印樣式）功能表中選擇「Album Page」（相簿頁）。點按「Select Template」（選擇範本）箭頭以選擇大版面範本。點按「+」按鈕將相片添加到「Drawer」（抽屜）（如果沒有看到「Drawer」，請點按「Drawer」（抽屜）按鈕）。將每張相片從「Drawer」拖曳到範本中所需的相片框。

English

Frequently Asked Questions

Your HP printer and software offer borderless photo printing, large-format templates, and other layout options to meet your creative needs.

For more information, see the User's Guide.

How do I print a borderless photo from the printer control panel?

Insert a memory card with photos, then choose a photo to print. On the printer control panel, press the **Layout** button to select the One photo per sheet, borderless icon, then press **Print**.

See the User's Guide to find out how to print borderless photos from your Windows or Macintosh computer.

How do I choose a large-format template?


Large-format templates consist of a plain white background with fixed picture holders into which you can drag photos. Photos are automatically cropped by the picture holders. You can resize the photos and move them around within the picture holder.

Windows: On the **Projects** tab in HP Image Zone, click **Album Pages**. In the Work area, click a page size and a theme, then click a large-format template. Select photos from the **My Images** tab, then drag each photo from the selection tray into the desired photo holder in the template.

Macintosh: Choose **HP Image Print** from the **HP Photosmart** Menu in the Dock. Choose **Album Page** in the **Print Style** menu. Click the Select Template arrows to select a large-format template. Add photos to the Drawer by clicking the + button (if the Drawer is not visible, click the **Drawer** button). Drag each photo from the Drawer onto the desired photo holder in the template.

需要更多資訊？

Need more information?

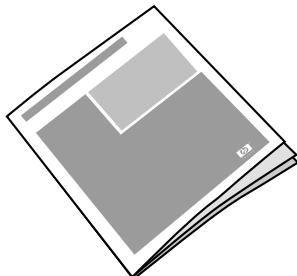

請閱讀《使用指南》以獲得有關印表機功能的描述、軟體和硬體的疑難排解資訊，以及如何使用您的全新 HP Photosmart 印表機來執行特殊列印工作的說明。

Read the User's Guide for a description of the printer features, software and hardware troubleshooting information, and explanations of how to perform specific printing tasks using your new HP Photosmart printer.



請參閱「螢幕上的 HP Photosmart 說明」以取得有關使用您的印表機隨附之軟體的資訊。

Check the Onscreen Photosmart Help for information about using the software that came with your printer.



讓 HP 的得獎支援與服務為您提供每週 7 天，每天 24 小時的線上與電話援助。

HP 支援網站與電子支援：www.hp.com/support

材質與列印耗材：www.hpsupply.com

Let HP's award-winning support and services show you the way with assistance online or over the phone, 24 hours a day, 7 days a week.

HP support Web site and E-support: www.hp.com/support

Media and printing supplies: www.hpsupply.com

www.hp.com



Q5745-90169

新加坡印製，2005 年 1 月 • v1.0.1

© 版權所有 2005 Hewlett-Packard Development Company, L.P. ®

Printed in Singapore 1/05 • v1.0.1

© 2005 Hewlett-Packard Development Company, L.P.

